
YOR 920040080USI Kwark TAD

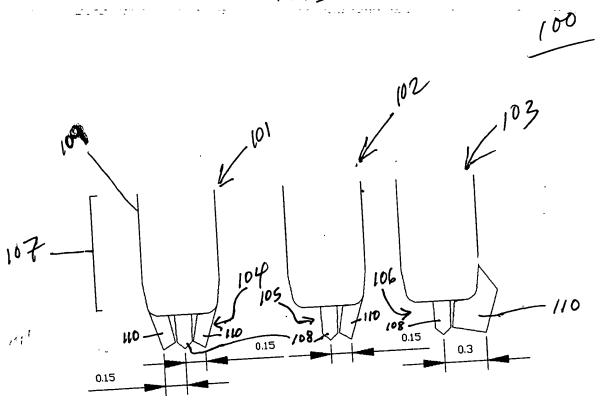

Flaure 1

YOR 920040080US/ Kwark TAD

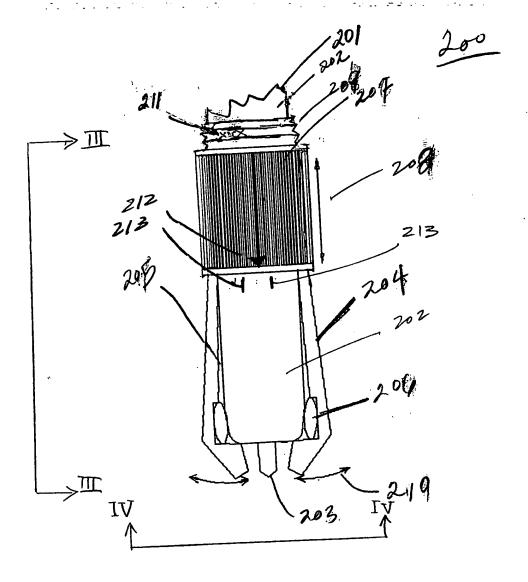


FIGURE 2

YOR 9 20040080 USI

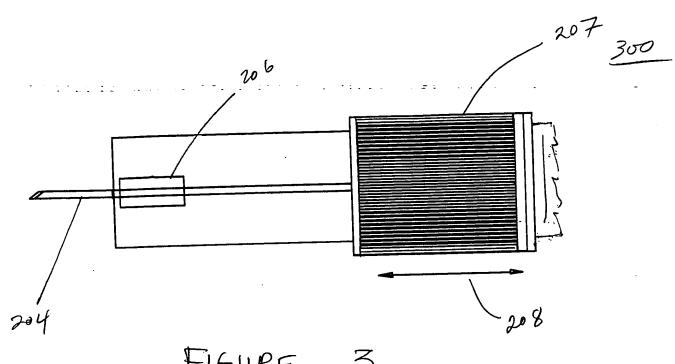


FIGURE 3

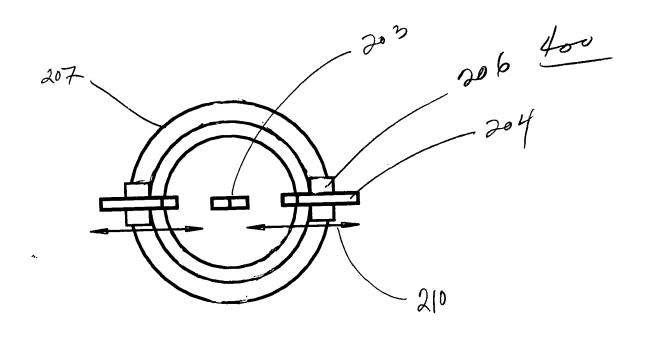


FIGURE 4

10K 920040080USI JOI - Attach Peripheral Probe (2) 204 outer wall 202 SOZ-IIacorporate Thread Interface Install Sleeve 207 504 - Install Flexible Member 2016

FIGURE 5

YOR 9200 40080 USI 601-2 Make Coarse Adjustment 2 Apply Probe To Test Points

HGURE 6